

TCORX
FITNESS IN MOTION

UPUTE



SRX70S




Cod : GRLDTCORXSRX70S

Rev : 00

Ed : 09/18



EKSPLODIRANI CRTEŽ & POPIS DIJELOVA:

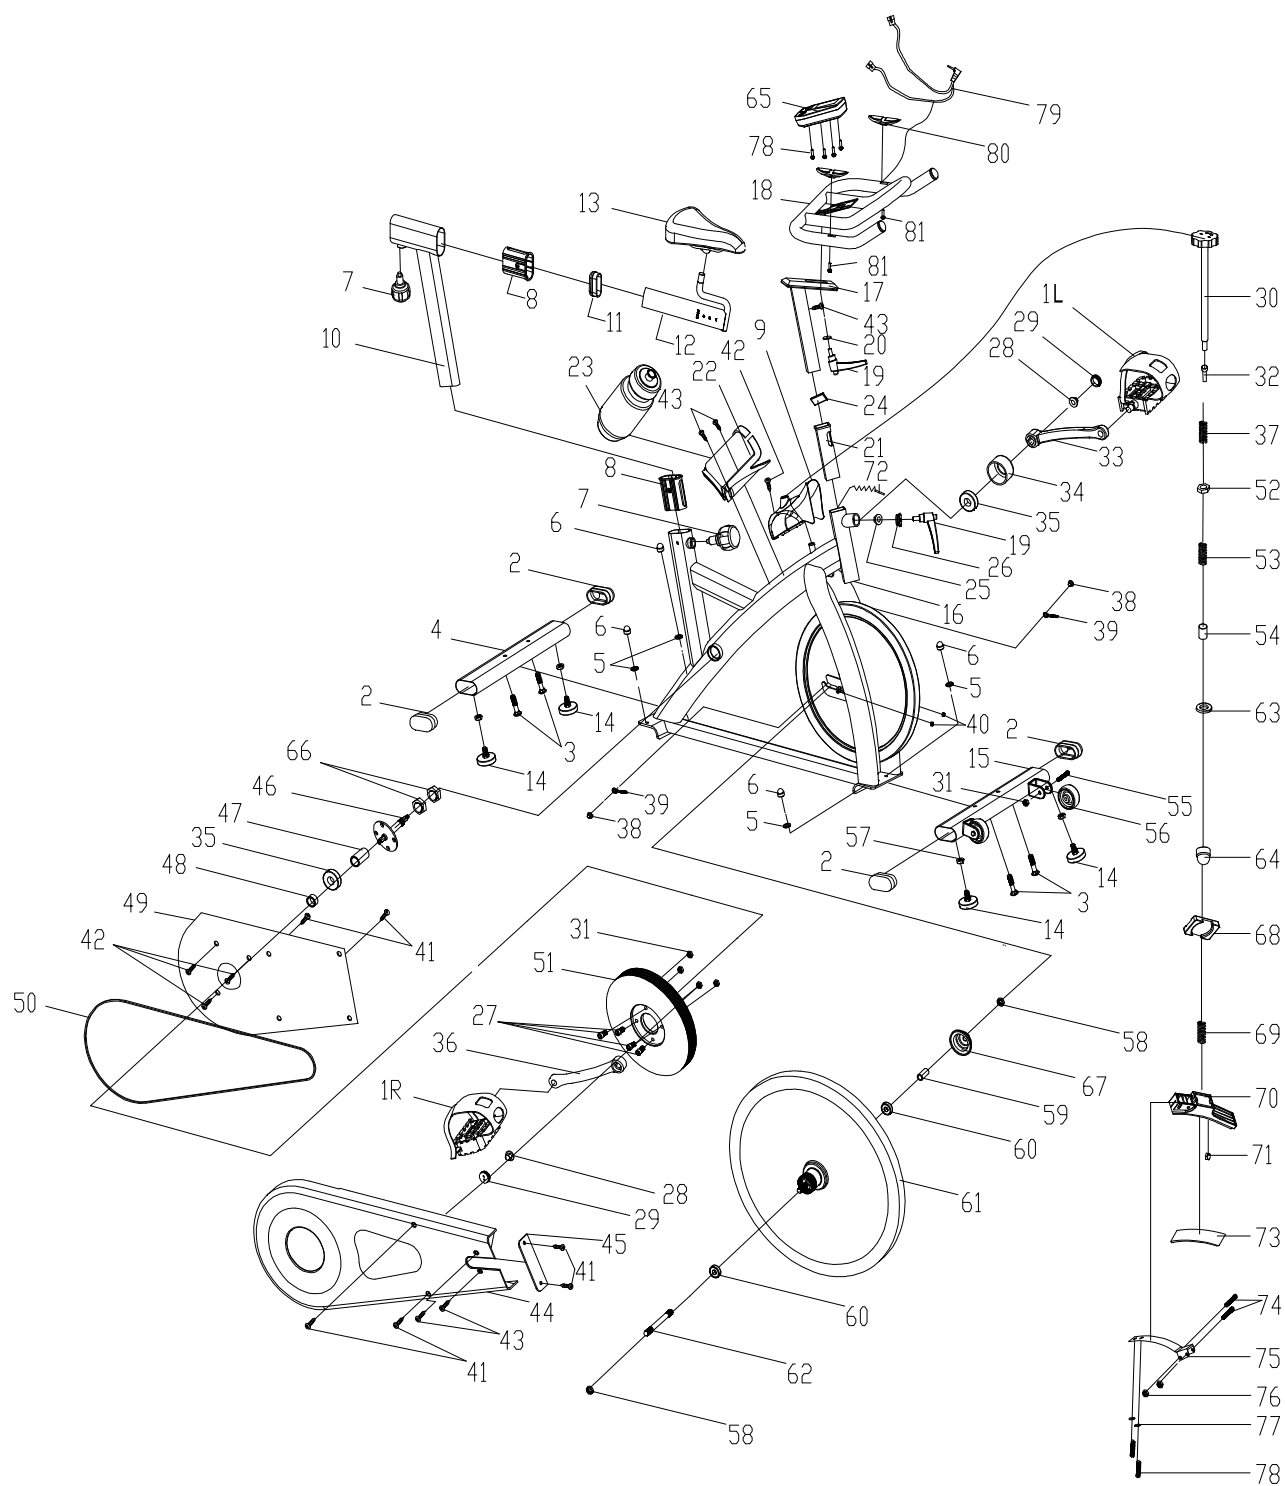

NO	NAME	QUANTITY	SPEC
1	PEDAL	1	JD-301 (9/16")
2	END CAP1	4	80*40*1.5
3	CARRIAGE BOLT	4	GB/T 12-1988 M8*52
4	REAR STABILIZER	1	WELDING
5	FLAT WASHER	8	GB/T 95-2002 8
6	DOMED NUT	4	GB/T 802-1988 M8 (H=16mm)
7	SPRING ADJUSTMENT KNOB	2	φ50*82 (M16*1.5)
8	PLASTIC SLEEVE 1	2	70*30*1.5
9	KNOB COVER	1	177X142X187
10	VERTICAL SEAT POST	1	WELDING
11	END CAP 2	1	70*30*1.5
12	SEAT POST	1	WELDING
13	SEAT	1	DD-2681
14	STOPPER	4	φ32*37/(M8X25)
15	FRONT STABILIZER	1	WELDING
16	MAIN FRAME	1	WELDING
17	HANDLEBAR POST	1	WELDING
18	HANDLE BAR	1	WELDING
19	L SHAPE KNOB	2	M10*25
20	FLAT WASHER 1	1	φ45*φ10.5*5
21	PLASTIC SLEEVE 2	1	38*38*1.5
22	BOTTLE HOLDER	1	117*85*90
23	BOTTLE	1	XS-003(1#) 500ML
24	END CAP 3	1	38*38*1.5
25	FIXING SHAFT	1	φ22*23 (V)
26	FIXING NUT	1	Q235/32*12
27	BOLT	4	GB/T 70.2-2000 M8*15
28	FIXING NUT 1	2	GB/T 6177.2-2000 M10*1.25
29	CRANK END CAP	2	φ23*7.5
30	KNOB	1	φ40*180 (φ10)
31	LOCK NUT	6	GB/T 889.1-2000 M8
32	BUSHING	1	φ18*φ10*10
33	LEFT CRANK	1	170*27
34	CRANK COVER	1	φ56*28
35	BEARING	2	6004ZZ
36	RIGHT CRANK	1	170*27
37	SPRING 1	1	δ1.8X40
38	FIXING NUT 2	2	GB/T 802-1988 M12X1.25 (H=16mm)
39	FIXING BOLT	2	M6*57
40	NUT	2	GB/T 889.1-2000 M6

NO	NAME	QUANTITY	SPEC
41	SCREW 1	8	GB/T 845-1985 ST4.2*19
42	SCREW 2	6	GB/T 15856.1-2002 ST4.2X19
43	SCREW 3	2	GB/845-85 ST4.8X13
44	OUTER CHAIN COVER	1	654*263*49 (507g)
45	LITTLE CHAIN COVER	1	108*37*3 (7g)
46	AXIS	1	φ20*162
47	LONG FIXING TUBE	1	φ25*φ20.5*41
48	SHORT FIXING TUBE	1	φ25*φ20.5*9
49	INNER CHAIN COVER	1	451*260*2 (250g)
50	BELT	1	5PK53
51	BELT WHEEL	1	φ200*24
52	FIXING NUT 2	1	16X16X5 (M10)
53	SPRING 2	1	φ1.0X55
54	SHORT FIXING TUBE	1	φ14*φ10.2*25.5
55	BOLT	2	GB/T 5780-2000 M8*40
56	WHEEL	2	φ50*23
57	NUT	4	GB/T 41-2000 M8
58	FIXING NUT 2	2	M12X1.25 H=6
59	FIXING TUBE	1	φ16*φ12.1*35
60	BEARING	2	6001ZZ
61	FLYWHEEL	1	HT250/φ453*72
62	FLYWHEEL SHAFT	1	φ12*160
63	FLAT WASHER 1	1	GB/T 95-2002 6
64	DOMED NUT 1	1	GB/T 802-1988 M6
65	COMPUTER	1	ST-6527(ST-7607)
66	FIXING NUT	2	27*M20*1 (5mm)
67	FLYWHEEL COVER	1	φ59*35
68	SPRING COVER	1	32*23*2
69	SPRING 3	1	φ2.2
70	PLASTIC FRAME	1	200*47*30
71	LITTLE PLASTIC	1	14*9*14
72	SENSOR	1	SR-202
73	WOOLLY BLOCK	1	113*25*6
74	BOLT 1	2	GB/T 5780-2000 M5*30
75	SPRING BRAKE	1	δ1.0
76	LOCK NUT	2	GB/T 889.1-2000 M5
77	SPRING WASHER 1	2	GB/T 859-1987 5
78	BOLT 2	2	GB/T 5780-2000 M5*10
79	PULSE WIRE	1	L=800
80	PULSE	2	
81	SCREW 5	2	GB/845-85 ST4.2X25

UPUTSTVO ZA MONTAŽU:

1.PRIPREMA:

- A. Prije sastavljanja provjerite imate li dovoljno prostora oko predmeta.
- B. Koristite sadašnji alat za sastavljanje.
- C. Prije sastavljanja provjerite jesu li dostupni svi potrebni dijelovi (na gornjem dijelu ovog uputstva pronaći ćete crtež eksplozije sa svim pojedinačnim dijelovima (označenim brojevima) od kojih se sastoji ovaj predmet.

2.UPUTSTVO ZA MONTAŽU:

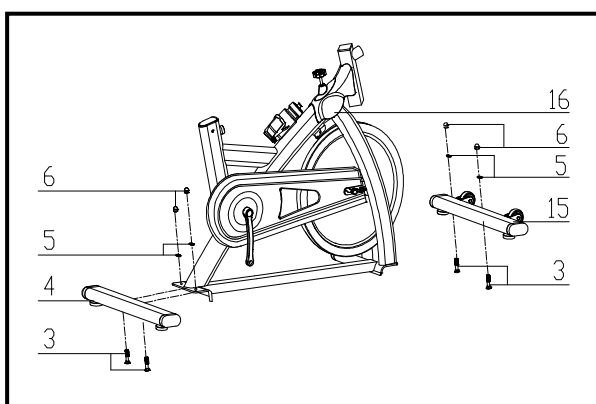


FIG.1

FIG.1:

Pričvrstite prednji stabilizator (pt. 15) na glavni okvir (pt.16) pomoću dva seta Ø8 ravni podloška (pt.5), M8 maticom (pt.6) i M8 * 52 vijkom (3).

Pričvrstite stražnji stabilizator (pt.4) na glavni okvir (pt.16) pomoću dva kompleta Ø8 ravni podloška (pt.5), M8 maticom (pt.6) i M8 * 52 vijkom (3).

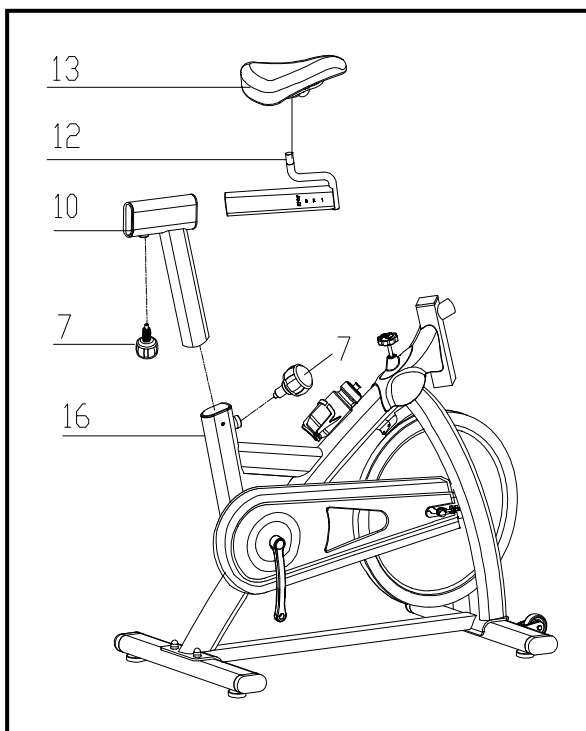


FIG.2

FIG.2:

Gurnite nosač sjedala (12) u okomiti stup sjedala (10) i, na željenom položaju, poravnajte rupe i učvrstite ih gumbom za podešavanje opruge (pt.7). Sada učvrstite sjedalo (13) na nosač sjedala (12) kako je prikazano. Umetnite okomiti stup sjedala (10) u glavni okvir (16) i poravnajte rupe. Osigurajte sedlo u položaju pomoću gumba za podešavanje (7). Ispravna visina sjedala može se podesiti nakon što se bicikl u potpunosti sastavi.

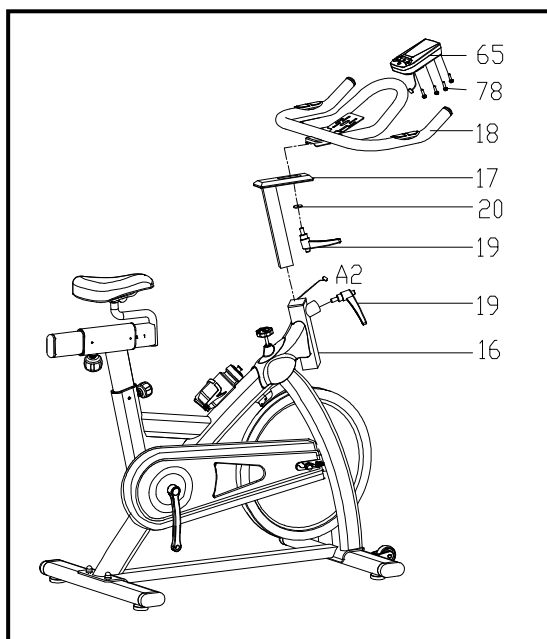


FIG.3:

Gurnite oslonac upravljača (pt.17) u kućište stupa upravljača na glavnom okviru (pt.16). Morat ćete popustiti nazubljeni dio gumba L oblika (pt.19) i povući gumb unatrag, a zatim odabrati željenu visinu. Otpustite gumb i ponovno zategnite narezani dio. Zatim učvrstite upravljač (pt.18) ravnom podloškom 1 (20) i gumbom L oblika (19)

PAŽNJA: RUKOHVAT JE POTREBNO UČVRSTITI

Namjestite računalo (pt.65) na držač računala na upravljaču (pt.18) s vijkom (pt.78)

Umetnite kabel senzora (a) u čahuru koja se nalazi na stražnjoj strani računala (65).

FIG.3


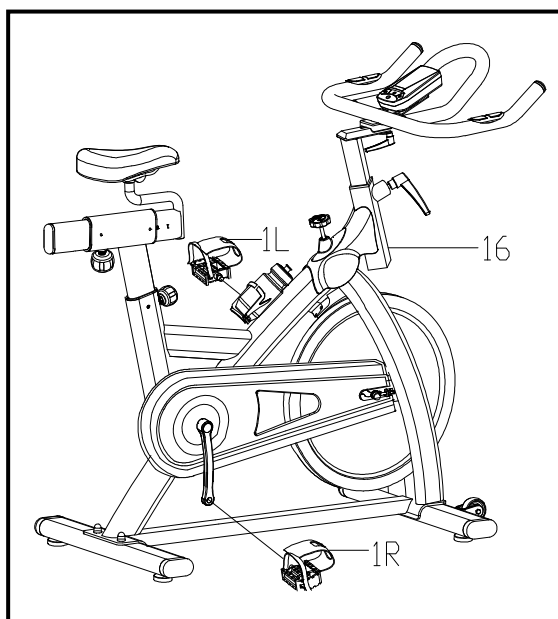


FIG.4:

Pedale (pt.1 L & pt.1 R) imaju oznaku "L" i "R" - Lijevo i Desno. Spojite ih na odgovarajuće ručice radilice. Desna radilica je s desne strane ciklusa dok sjedite na spravi.

Imajte na umu da desnu papučicu treba naviti u smjeru kazaljke na satu, a lijevu papučicu suprotno od kazaljke na satu.


FIG.4

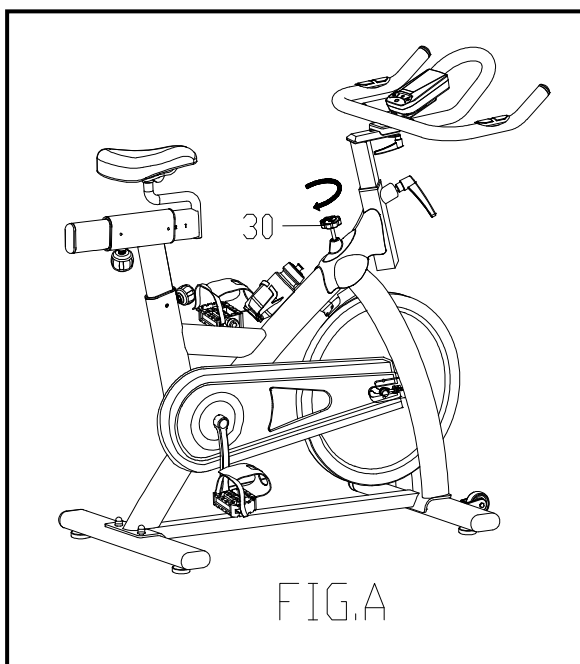

A.) Prilagođavanje napetosti:
Povećavanje ili smanjenje napetosti omogućuje vam dodavanje raznolikosti u vaše treninge podešavanjem razine otpora bicikla.

Da biste povećali napetost i povećali otpor (koji zahtijeva veću snagu papučice), okrenite gumb za upravljanje kočenjem i zatezanjem u nuždi (# 30) udesno.

Da biste smanjili napetost i povećali otpor (koji zahtijeva manju čvrstoću pedale), okrenite gumb za upravljanje kočenjem i zatezanjem u nuždi (# 30) ulijevo. B.) Pomoću funkcije hitne kočnice:

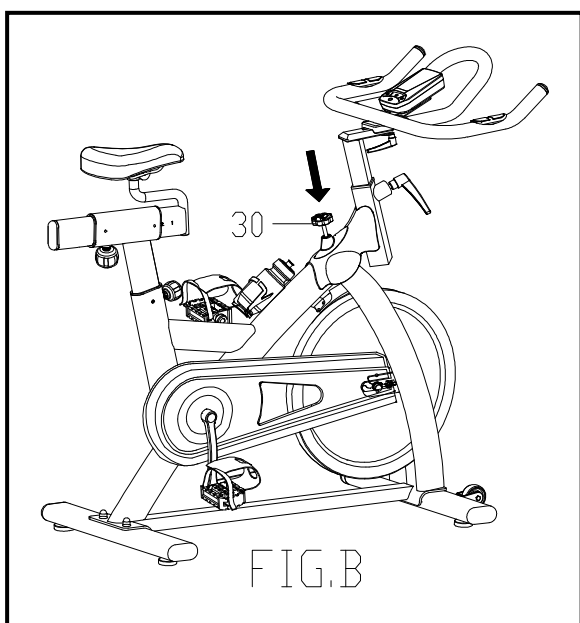

Ista tipka koja vam omogućuje podešavanje napetosti bicikla ujedno je i kočnica u nuždi. Koristite ovu sigurnosnu značajku u bilo kojoj situaciji u kojoj biste trebali sići s bicikla i / ili zaustaviti zamašnjak bicikla.

Da biste koristili funkciju kočenja u nuždi u bilo kojoj situaciji u kojoj biste je trebali, čvrsto pritisnite tipku za upravljanje kočenjem u nuždi i kočnicom (# 30).

DISTRIBUTER:

Enim sport d.o.o.
Vladimira Varićaka 18
HR-10 000 Zagreb
M: +385 (0)99 421 01 01
T: +385 (0)1 55 86 324
I: www.enimsport.hr



UVOZNIK:

GARLANDO SPA
Via Regione Piemonte, 32 - Zona Industriale D1
15068 - Pozzolo Formigaro (AL) - Italy
www.toorx.it - info@toorx.it